


# miniMon

Simple CAN Monitoring Tool for Windows

Software Version 3.0

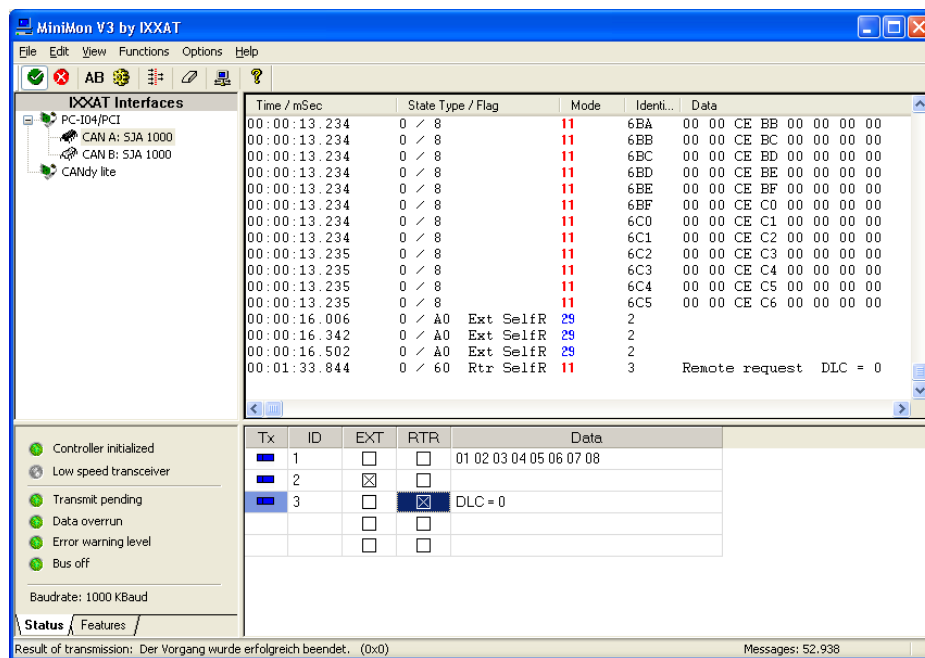

## **IXXAT**

### **Headquarter**

IXXAT Automation GmbH  
Leibnizstr. 15  
D-88250 Weingarten

Tel.: +49 (0)7 51 / 5 61 46-0  
Fax: +49 (0)7 51 / 5 61 46-29  
Internet: [www.ixxat.de](http://www.ixxat.de)  
e-Mail: [info@ixxat.de](mailto:info@ixxat.de)

### **US Sales Office**

IXXAT Inc.  
120 Bedford Center Road  
USA-Bedford, NH 03110

Phone: +1-603-471-0800  
Fax: +1-603-471-0880  
Internet: [www.ixxat.com](http://www.ixxat.com)  
e-Mail: [sales@ixxat.com](mailto:sales@ixxat.com)

## **Support**

In case of unsolvable problems with this product or other IXXAT products please contact IXXAT in written form by:

Fax: +49 (0)7 51 / 5 61 46-29  
e-Mail: [support@ixxat.de](mailto:support@ixxat.de)

## **Copyright**

Duplication (copying, printing, microfilm or other forms) and the electronic distribution of this document is only allowed with explicit permission of IXXAT Automation GmbH. IXXAT Automation GmbH reserves the right to change technical data without prior announcement. The general business conditions and the regulations of the license agreement do apply. All rights are reserved.

<b>1</b>	<b>Overview .....</b>	<b>5</b>
<b>2</b>	<b>Functions and operation .....</b>	<b>6</b>
	<b>2.1 Starting the program.....</b>	<b>6</b>
	<b>2.2 Configuration of the CAN controller .....</b>	<b>6</b>
	2.2.1 Selection of the CAN interface boards .....	6
	2.2.2 Selection and configuration of the CAN controller .....	7
	2.2.3 Description of the input boxes.....	8
	2.2.4 Description of the columns in the Calculator window .....	8
	2.2.5 Starting the CAN controller .....	9
	<b>2.3 State of the CAN controller .....</b>	<b>9</b>
	2.3.1 Meaning of the state LEDs .....	9
	<b>2.4 Menu and toolbar .....</b>	<b>10</b>
	2.4.1 Menu reference and toolbar buttons.....	10
	2.4.1.1 File menu .....	10
	2.4.1.2 View menu .....	10
	2.4.1.3 Functions menu .....	10
	2.4.1.4 Options menu .....	10
	2.4.1.5 Help menu .....	10
	<b>2.5 Receiving messages .....</b>	<b>11</b>
	2.5.1 Description of the columns in the Receive window .....	11
	2.5.2 Description of the additional status information .....	11
	<b>2.6 Transmitting messages .....</b>	<b>12</b>
	2.6.1 Overview .....	12
	2.6.2 Description of the columns in the transmit window .....	12
	<b>2.7 Logging messages.....</b>	<b>13</b>
<b>3</b>	<b>Support .....</b>	<b>14</b>



# 1 Overview

The miniMon V3 is a CAN monitor program which enables online monitoring of the bus traffic on the CAN bus and the transmission of individual CAN objects. The miniMon is contained in the VCI V3 and therefore available under Windows 2000/XP.

The display window of the miniMon V3 provides the following areas:

- Overview of the available CAN interface boards
- Current state of the selected CAN controller
- Display of the messages received
- Display of transmit messages

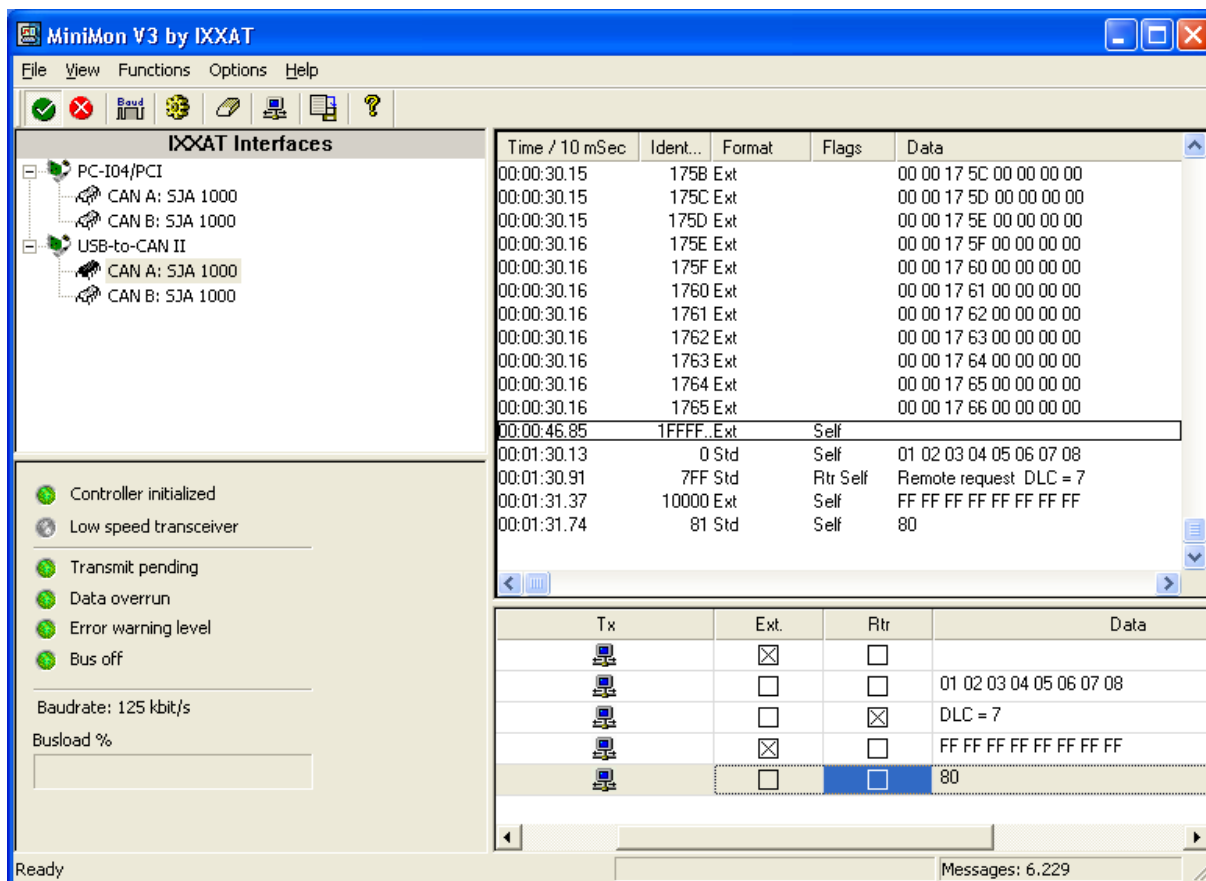


Fig. 1-1: Display window of the miniMon

# 2 Functions and operation

## 2.1 Starting the program


Start the miniMon from the Start menu of the VCI or by manually running the file miniMonV3.exe.

If only one CAN controller is available, the controller configuration dialogue is displayed directly, otherwise a controller has to be selected by hand in the controller selection window.

## 2.2 Configuration of the CAN controller

### 2.2.1 Selection of the CAN interface boards

The available CAN interface boards are listed in the top left-hand corner of the program window.

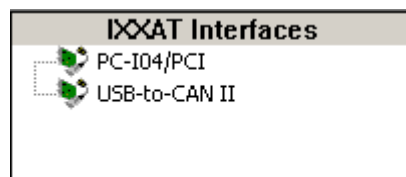

---

**Fig. 2-1: Available CAN interface boards**

By clicking once with the left-hand mouse button, additional data are displayed in the bottom left-hand corner.



---

**Fig. 2-2: Information on the selected CAN interface boards**

A "+" symbol now appears in front of the selected CAN interface board. The available CAN controllers are displayed by clicking on the "+" symbol.




Fig. 2-3: Available controllers on the CAN interface board

### 2.2.2 Selection and configuration of the CAN controller

A CAN controller can now be selected with the mouse button.

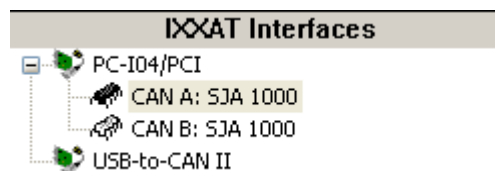


Fig. 2-4: Selected and marked CAN controller

The bit rate to be used can now be set via the menu item Options/Configurations. Here you set a specified standard baud rate (according to CiA) or enter the appropriate baud rate for your CAN network via the bit timing register.

If your hardware contains a low speed bus interface, the controller can be switched to the low speed mode.

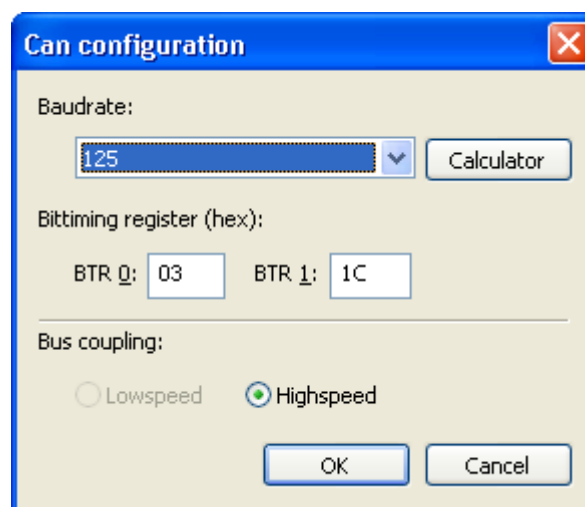


Fig. 2-5: Configuration dialog of the CAN controller

## Functions and operation

Via the calculator button, a dialogue for calculation of the bit timing parameters can be opened. The relevant bit timing values can be calculated by entering a bit rate.

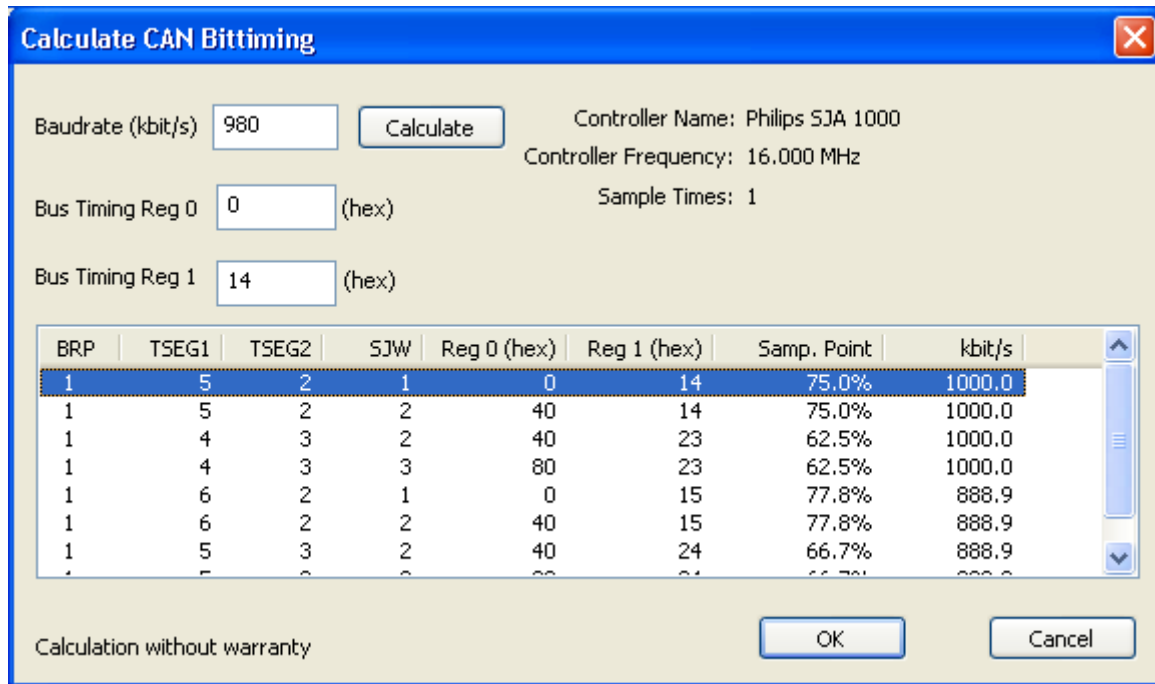


Fig. 2-6: Bit rate configuration

### 2.2.3 Description of the input boxes

- Baud rate (kBit/s) – Baud rate to be calculated in kBit per second
- Bus Timing Reg 0 – Value of the Bus Timing Register 0
- Bus Timing Reg 1 – Value of the Bus Timing Register 1

### 2.2.4 Description of the columns in the Calculator window

- BRP – Baud Rate Prescaler
- TSEG1 – Timing Segment 1
- TSEG2 – Timing Segment 2
- SJW – Synchronization Jump Width
- Reg 0 (hex) – Bit timing register 0 (hexadecimal format)
- Reg 1 (hex) – Bit timing register 1 (hexadecimal format)
- Samp. Point – Sample Location
- kbit/s – Calculated baud rate with the values of the marked line

### 2.2.5 Starting the CAN controller

The CAN controller is now started via the menu item Functions/Start and is ready to transmit and receive.

## 2.3 State of the CAN controller

In started state, the current controller state is displayed in the state window in the bottom left-hand corner.

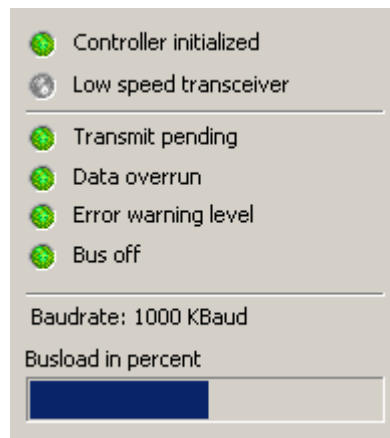


Fig. 2-7: Controller state

### 2.3.1 Meaning of the state LEDs

Name	Meaning
Controller initialized	green = CAN controller is started
Low speed transceiver	green = Low speed transceiver is enabled
Transmit Pending	red = There are messages not yet transmitted in the transmit queue
Data overrun	red = CAN controller data overrun, messages may have been lost
Error warning level	red = CAN controller in Error warning level
Bus off	red = CAN controller in Bus off

Below this LEDs, the currently set bit rate is displayed. If the set bit rate is not a CiA compliant standard rate, the bit timing values are displayed as hexadecimal figures.

With some CAN interface boards, the current bus load of the CAN bus is displayed as a graphic bar in per cent.


### 2.4 Menu and toolbar

#### 2.4.1 Menu reference and toolbar buttons






##### 2.4.1.1 File menu

Menu item	Toolbar	Function
Exit		Ends the miniMon


##### 2.4.1.2 View menu

Menu item	Toolbar	Function
Clear		Clears the display of the received data
Toolbar		Shows/hides the toolbar
Statusbar		Shows/hides the statusbar


##### 2.4.1.3 Functions menu

Menu item	Toolbar	Function
Transmit Message		Transmits the currently marked message from the transmit table
Start		Starts the CAN controller
Stop		Stops the CAN controller
Automatic Baud detection		Listens on the CAN bus and attempts to detect the current bit rate
Logging to file		Writes the received data in a CSV file

##### 2.4.1.4 Options menu

Menu item	Toolbar	Function
Configuration		Opens the configuration dialogue

##### 2.4.1.5 Help menu

Menu item	Toolbar	Function
Open Manual		Opens the PDF manual
About		Displays a dialogue with the version

	information
--	-------------

## 2.5 Receiving messages

Received CAN objects are displayed in the receive window with timestamp, state, identifier and data.

Time / 10 mSec	State	Mode	Identifier	Data
00:49:02.11	Self	11	0	01 02 03 04 05 06 07 08
00:49:02.50	Self	29	1FFFFFF	55 AA 55 AA 55 AA 55
00:49:02.88	Rtr Self	29	800	Remote request DLC = 3
00:49:03.29	Self	29	1	
00:49:03.70	Self	11	1	

Fig. 2-8: Example of received messages

### 2.5.1 Description of the columns in the Receive window

- Time** The time of reception of the message is displayed here in increments of 0.01 seconds
- Identifier** The message identifier is displayed in hexadecimal format
- Format** With standard CAN format (11 bit identifier), "Std" is displayed, with extended CAN format (29 bit identifier), "Ext" is displayed
- Flags** In the state column, possible additional information on the message is also displayed
- Data** The data of the CAN message are displayed byte-wise in hexadecimal format

### 2.5.2 Description of the additional status information

The following information may appear in the "State" column:

Name	Meaning
Ovr	Messages were lost after this message
Rtr	A remote request message
Self	Self-reception message, sent by miniMon

### 2.6 Transmitting messages

#### 2.6.1 Overview

Individual messages can be sent. This is done by clicking on the symbol in the TX column, or by marking the message and then pressing the "F5" key, or via the menu items Functions/Transmit Message.

Up to 5 transmit messages can be set up.






Tx	ID	EXT	RTR	Data
	0	<input type="checkbox"/>	<input type="checkbox"/>	01 02 03 04 05 06 07 08
	1FFFFFF	<input checked="" type="checkbox"/>	<input type="checkbox"/>	55 AA 55 AA 55 AA 55
	800	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	DLC = 3
	1	<input checked="" type="checkbox"/>	<input type="checkbox"/>	
	1	<input type="checkbox"/>	<input type="checkbox"/>	

Fig. 2-9: Example of transmit data

#### 2.6.2 Description of the columns in the transmit window

- **ID** The identifier of the message is displayed here in hexadecimal format.  
In standard format (11 bit), the value can be between 0 and 7FFh.  
In extended format (29 bit), the value can be between 0 and 1FFFFFFFh.
- **EXT** The message is transmitted in extended format (29 bit), even if the identifier is less than 7FFh.  
With an identifier of more than 7FFh, the column is automatically marked with a cross.
- **RTR** Here the message is marked as a data request telegram (remote frame).
- **Data** Up to 8 databytes in hexadecimal format can be entered here.  
In the case of two-digit data, the next databyte is automatically jumped to, with single digit data it is possible to move on with the spacebar.  
In the case of data request telegrams, the data length code can be defined here.

## 2.7 Logging messages

The received CAN messages can be stored in a file as ASCII text.

The format of the text corresponds to the CSV format (comma separated value file) and can be read with Excel.

Here is an example:

ASCII Trace IXXAT miniMon V3 Version: 1.0.0.5				
Date: 31.03.2006				
Start time: 13:22:07				
Stop time: 13:23:34				
Baud rate: 1000 kbit/s				
Time	Identifier (hex)	Format	Flags	Data (hex)
00:03:27.72	770	hrs		00 0C 87 71 00 00 00
00:03:27.72	771	hrs		00 0C 87 72 00 00 00 00
<b>----- Logging Overrun -----</b>				
00:03:27.73	7DE	hrs		
00:03:27.73	7DF	hrs		00
00:03:27.73	7E0	hrs		00 0C
00:03:27.73	7E1	hrs		00 0C 87
00:03:27.73	7E2	hrs		00 0C 87 E3
00:03:27.73	7E3	hrs	<b>Ovr</b>	00 0C 87 E4 00
00:03:27.73	7EF	hrs		00 0C 87 F0 00 00 00 00
00:03:27.73	7F0	hrs		
00:03:27.73	7F1	hrs		00

The marked overruns have the following meaning:

- Logging Overrun = Data were lost when writing to the hard drive. The hard drive may be too slow.
- Ovr in the Flags column = Messages were lost after this message

### 3 Support

For more information on our products, FAQ lists and installation tips, please refer to the support section of our website (<http://www.ixxat.de>), which also contains information on current product versions and available updates.

If you have any further questions after studying the information on our website and the manuals, please contact our support department. The support section on our website contains the relevant forms for your support request. In order to facilitate our support work and enable a fast response, please provide precise information on the individual points and describe your question or problem in detail.

If you would prefer to contact our support department by phone, please also send a support request via our website first, so that our support department has the relevant information available.